USER MANUAL

QG65/76 N2 CANopen Inclinometer (Type I)

V2.3, Mar-25



DIS Sensors bv
Oostergracht 40
3763 LZ Soest | The Netherlands

T +31 (0)35 - 603 81 81
M info@dis-sensors.com
W www.dis-sensors.com

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Contents

1. Safety information 3
   1.1. Intended use 3
   1.2. Incorrect use 3
   1.3. Sensor defective 3
2. About this manual 4
   2.1. Intended use 4
   2.2. Symbols used in the text 4
   2.3. Copyright 4
   2.4. Document revision control 5
3. Quick reference 6
4. Installation guide 7
   4.1. Mechanical drawing 7
   4.2. Mounting 7
   4.3. Connection 8
   4.4. CAN termination 9
5. Technical data 9
6. Functional description 10
   6.1. Inclination measurement principle 10
   6.2. Measuring axis and direction 10
      6.2.1. Measuring axis and direction for Inclination 10
      6.2.2. Measuring axis and direction for acceleration 11
   6.3. Signal processing 12
      6.3.1. Sampling rate 12
      6.3.2. Filter algorithm 12
      6.3.3. Digital filters 12
   6.4. Function mode 14
   6.5. Output format 15
   6.6. Boot-up procedure 16
   6.7. Emergency message 16
   6.8. LSS (Layer Setting Service, according to CiA305-DSP) 17
   6.9. Firmware management 17
   6.10. Load factory default settings 19
   6.11. Zero adjustment 20
   6.12. EDS & DCF 20
   6.13. Mappable objects 21
7. CANopen specification 22
   7.1. CANopen Communication Objects (COB) 22
   7.2. Predefined CAN-IDs 22
   7.3. PDO (Reading sensor output) 23
   7.4. SDO (configuring Object Dictionary) 23
   7.5. NMT state 23
   7.6. Object Dictionary (device parameters) 24
8. CAN Object dictionary overview 25
   8.1. Communication profile (Index 1000h - 1FFFh) 25
      8.1.1. Object 1001_h Error register 27
      8.1.2. Object 1002_h Manufacturer status register 27
      8.1.3. Object 1003_h Predefined error field 28
      8.1.4. Object 1005h COB-ID SYNC message 29
      8.1.5. Object 1006h Communication cycle period 29
      8.1.6. Object 1010_h Store parameters 29
      8.1.7. Object 1011_h Restore factory default parameters 30
      8.1.8. Object 1014_h COB-ID EMCY 30

DIS makes sense!

ISO 9001 BUREAU VERITAS Certification

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.1.9. Object 1020h verify configuration 30
8.1.10. Object 1029h error behaviour 30
8.1.11. Object 1800h, 1801h TPDO communication parameter 31
8.1.12. Object 1A00h, 1A01h TPDO Mapping parameter 31
8.1.13. Object 1F80h NMT start-up behaviour 32
8.2. Manufacturer-specific profile (2000h - 5FFFh) 33
8.2.1. Object 3007h Function mode 34
8.2.2. Object 300Fh Zero adjustment Inclination 34
8.2.3. Object 301Eh Manufacturer status register error mask 34
8.2.4. Object 301Fh Manufacturer status register mapping 35
8.2.5. Object 300Eh Output filter 35
8.2.6. Object 300Dh Moving average filter TPDO1 and TPDO2 35
8.2.7. Object 3014h Lowpass filter 36
8.2.8. Object 3032h Sub Range Limits 36
8.3. Standardized device profile (6000h – 9FFFh) (CiA410) 37
8.3.1. Object 6000h Resolution 38
8.3.2. Object 6011h, 6021h Operating parameter 38
8.3.3. Object 6012h, 6022h Pre-set inclination value 38
8.3.4. Object 6013h, 6023h Offset inclination value 38
8.3.5. Object 6401h Sensor outputs 39
8.4. Data type 39
9. Configuration tool 40
9.1. Configuration kit 40
9.2. PC software 41
10. Abbreviations and definitions 47
11. Normative references 47

ISO 9001 BUREAU VERITAS Certification

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1. Safety information

1.1. Intended use

The QG65/76N2 CANopen Inclinometer is a MEMS-based inclination sensor with **CANopen** interface. This device provides precise and reliable inclination measurement in (semi)static conditions. The use of this device in a machine or system is permitted only under the following conditions:

- The user is trained and competent in the integration and use of inclination sensors in machinery.
- The user is familiar with the contents of both the datasheet and user manual.
- The user has a full understanding of CAN and CANopen.
- The device is used within the specified environmental conditions.
- The device is properly configured for its intended use.
- The device is mounted correctly as described in the datasheet and user manual.
- The device data is expressly not interpreted as safety data, except when used redundantly in a control system that is designed and tested for cross-check functionality between the primary and redundant devices.

1.2. Incorrect use

- Use of non-standard CAN cables.
- Device mounted incorrectly.
- Zero adjustment outside the specified range.
- Incorrect or absent CAN bus termination.
- Device used outside the specifications.

1.3. Sensor defective

The sensor is considered “defective” when

- No CAN output can be detected.
- An emergency message with sensor error information is detected. (→ 6.7 Emergency message)

In the event of uncertainty, contact the distributor or manufacturer. Any unauthorised modification or unapproved use will void both the warranty and any liability on the part of the manufacturer.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2. About this manual

2.1. Intended use

This manual applies solely to the QG65/76N2 CANopen inclinometer (Type I) with the following model designations:

- QG65/76N2-KIXv-360-CAN-C(F)M-UL —— 1 axis, ± 180°, vertical mounting, std. accuracy.
- QG65/76N2-KDXYh-090-CAN-C(F)M-UL —— 2 axes, ± 90°, horizontal mounting, std. accuracy.
- QG65/76N2-KDXYh-030-CAN-C(F)M-UL —— 2 axes, ± 30°, horizontal mounting, std. accuracy.
- QG65/76N2-KIXv-360H-CAN-C(F)M-UL —— 1 axis, ± 180°, vertical mounting, high accuracy.
- QG65/76N2-KDXYh-090H-CAN-C(F)M-UL —— 2 axes, ± 90°, horizontal mounting, high accuracy.
- QG65/76N2-KDXYh-030H-CAN-C(F)M-UL —— 2 axes, ± 30°, horizontal mounting, high accuracy.

DIS product code can be identified here.

2.2. Symbols used in the text

h	Subscript for hexadecimal values.
d	Subscript for decimal values.
⚠	Caution that indicates either potential damage to the sensor or explains how to avoid a problem.
🛈	Important information.
→	Cross-reference

2.3. Copyright

© Copyright 2025 DIS Sensors bv.

This manual is subject to change without notice.

All rights according to the copyright remain explicitly reserved for DIS Sensors bv.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.4. Document revision control

Version	Date(y-m-d)	Revision
V1.0	2021-03-19	1st release.
V2.0	2021-07-02	Correct errors in function mode 2, 6 and 7. Updated screenshots of configurator. Added message structure of object 1003h. Document revision control is put to the end of chapter2 due to the page length. Correct format 1003_h in table communication profile. Improved description of data processing. Correct command SYNC. Added high accuracy model name.
V2.1	2022-03-18	Configurator power adaptor needed when more than 1 sensor connected. Resolution configurable. Subrange configurable for 1-axis model. PC Application display resolution reduced to 1360x768p. Improved description boot-up procedure.
V2.2	2024-04-05	Added acceleration measuring range. Corrected an error.
V2.3	2025-03-10	Added QG76 housing. Corrected MEMS sampling rate. Corrected a few spelling errors.

Table 1 - Document revision

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3. Quick reference

General

- 1-axis ± 180° and 2-axes ± 30°/± 90° inclinometer
- Output type: CANopen
- Inclination, acceleration outputs defined by Function modes (→ object 3007_h)
- Sensor outputs can be customised using TPDO mapping parameters (→ object $1A00_h$)
- Internal sample rate MEMS: 1000Hz (H version) / 100Hz (std version); output rate: 100 Hz
- 2nd order Low pass Bessel filter: 10Hz (→object 3014_h)
- Output filter: adjustable 1st order LPF (→ object $300E_h$)
- Moving average filter: averaging time interval adjustable from 10 ms to 100 ms (→ object $300D_h$)
- An optional configurator is available (→DIS website)
- Approved for automotive use, approval number: E4-10R-05-4662

CAN, CANopen

- CAN interface: CAN2.0 A/B (compliant with ISO11898-1&2)
- CANopen application layer and communication profile: EN50325-4 (CiA301 v4.0 and 4.2.0)
- CANopen device profile for inclinometer: CiA410
- LSS (Layer Setting Service) implemented
- TPDO1 (CAN-ID: 180_h + Node ID) and TPDO2 (CAN-ID: 280_h + Node ID)
- Outputs: inclination X-axis (longitudinal) in object 6010_h; inclination Y-axis (lateral) in object 6020_h
- Internal switchable CAN termination resistor: default off (→ object 3003_h)
- CAN bus bit rate: default 250 kbit/s (→ object 3001_h)
- Node ID: default 01_h (→ object 3000_h range: 01_h – $7F_h$, max. 127 nodes)
- Heartbeat: default on, 2 s (→ object 1017_h)
- Two modes of PDO transmission (→ object 1800_h / 1801_h)
  - Event mode: default on, event timer default 100 ms (range 10 ms – 500 ms)
  - Sync mode: default off
- Vendor ID: $000001BD_h$ DIS Sensors (→ object 1018_h)
- Firmware version available via CAN Object Dictionary (→ object 1018_h)
- Serial number format: xxxxxx-xxx (→ object 1018_h)
- Zero adjustment of inclination available via CAN Object Dictionary (→ object $300F_h$).
- Pre-set inclination setting available via CAN Object Dictionary (→ objects 6012_h and 6022_h).
- Bootup in NMT Operational state (→object $1F80_h$)
- Negative values: two's complement
- Byte-sequence on CAN bus: little-endian (least significant byte first)

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4. Installation guide

4.1. Mechanical drawing

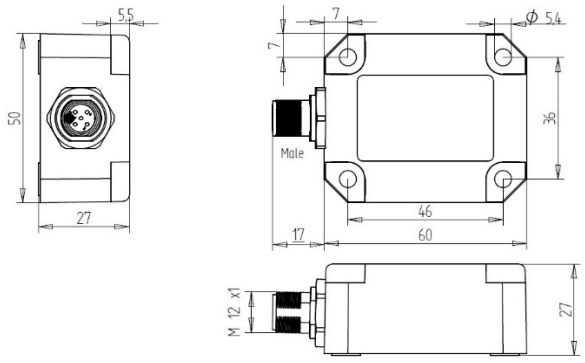

Figure 1 - QG65 housing size – 60 x 50 x 27 mm

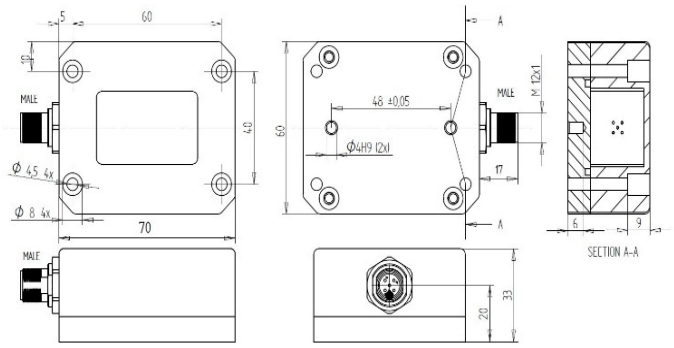

Figure 2 - QG76 housing size – 70 x 60 x 33 mm

4.2. Mounting

- Use the 4 screws provided (M5x25 mm zinc plated steel Pozidrive pan head screws with self-tapping PZ DIN7500CZ) to mount the device.
- If a software zero adjustment is impossible or undesirable, DIS provides an optional reference solution of replacing 2 of the provided screws with 2 optional 4mm Ø positioning pins, which can serve as mechanical reference.
- Tightening torque max. 2.5 Nm. A higher torque can cause damage to the housing or the internal electronics.
- Fix the sensor to a perfectly flat surface.
- A 1-axis inclinometer must be mounted vertically. The factory default zero position is with the male connector pointing down as shown in Figure 2 . Sensor can be zero adjusted at any position within the full range.
- A 2-axis inclinometer must be mounted horizontally. The factory default zero position is shown in Figure 2. After installation, sensor can be zero adjusted to eliminate the mechanical offsets within a ±5° offset range.



Figure 4 - Vertical mounting 1-axis inclination

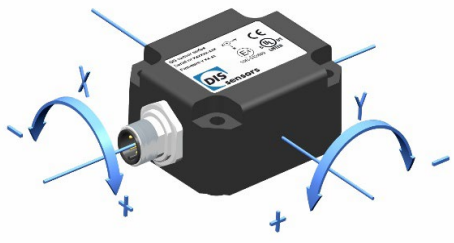

Figure 3 - Horizontal mounting 2-axes inclination

DIS makes sense!
ISO 9001 BUREAU VERITAS Certification
Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4.3. Connection

The sensor is equipped with either a single 5-pole M12 (A-coded) male connector according to IEC 61076-2-101, or with an additional 5-pole M12 (A-coded) female connector. This is specified in the suffix of the device model designation: suffix CM indicates single male connector; suffix CFM indicates both a female and a male connector.

The advantage of two connectors is that devices can be daisy-chained in the CAN network. The voltage supply is forwarded from the male to the female connector, providing both power and bus-connection to the next sensor with a single cable harness. The connection between male and female connector acts as an internal T-junction.

The pin assignment is according to CiA 303-1 V1.8.0.

Pin	Assignment
Pin 1	Shield
Pin 2	Vcc
Pin 3	Gnd & CAN_GND
Pin 4	CAN_H
Pin 5	CAN_L

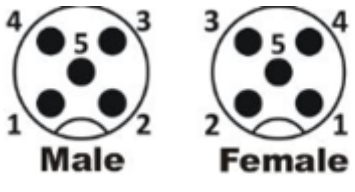

Figure 5 - Pin definition

- The maximum current for the internal T-junction is 2.5 A. This must be taken into account when using daisy-chained connections.
- The voltage supply must be dimensioned to prevent exceeding the specified voltage limits.
- The power consumption is about 50mA typical.
- This device must be connected to a class 2 power supply.
- Connect the sensor only to an approved CAN controller which must have a grounded shield. Alternative: connect the sensor housing to a grounded shield. All mentioned EMC standards that are met (see Declaration of Conformity) have been done with the housing connected to a grounded shield.

Installation of wiring and the opening and closing of electrical connections must only be carried out in de-energized state! Short-circuits, voltage spikes, etc. can cause malfunctions and/or cause the installation to become uncontrolled, creating a serious risk of injury or damage to property.

ISO 9001 BUREAU VERITAS Certification

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4.4. CAN termination

A CAN bus should be terminated properly to prevent signal reflections. The QG65N2 CANopen Inclinometer has an internal 120 Ohm termination resistor. By default, this is disabled, but it can be enabled with object 3003_h.

A separate M12 termination resistor and T-connector are also available as accessories for CANopen devices.



Figure 6 - M12 CAN terminator male 5p.
Order code: 10217



Figure 7 - M12 CAN terminator female 5p.
Order code: 10194



Figure 8 - M12 T-connector 5p.
Order code: 11822

The advantage of using a separate termination plug instead of the internal termination resistor is that an external termination plug is clearly visible. This helps to prevent an inadvertent double termination that could cause the entire CAN bus to malfunction.

5. Technical data

Please refer to the datasheet of your product.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

6. Functional description

6.1. Inclination measurement principle

QG65/76N2 Inclinometers measure inclination by measuring static acceleration of gravity using an accelerometer MEMS. In static conditions, inclination measurement by this principle is accurate and reliable.

However, the vibrations or movements present on almost all industrial machines generate undesirable g-forces. These dynamic g-forces accumulate and overlay the static g-forces, causing a 'dirty' inclination output that includes spurious or noise components.

A low-pass filter can stabilize the output, that can be enough for some applications. The downside of this filtering is that it increases the reaction time (latency) of the inclinometer. In a control system this results in a limit on the speed of movements, and reduced machine efficiency.

If the dynamic effects are dominant and acceptable delay time is limited, please consider our Dynamic inclinometer, where with the help of a gyroscope a sort of filtering is achieved without having the downside of delay time.

6.2. Measuring axis and direction

6.2.1. Measuring axis and direction for Inclination

A single-axis inclinometer (vertical mount) measures the inclination in the vertical plane over the full range 0-360° (X-output). The default 0° position and the measuring direction are shown in Figure 8.



Figure 9 - Measuring axis and direction of 1-axis inclination.

DIS makes sense!
ISO 9001 BUREAU VERITAS Certification
Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

A dual-axis inclinometer (horizontal mount) measures the inclination on both X and Y axis. Measuring range is up to 90°. Due to the measurement principle, only one axis may tilt more than 45°.

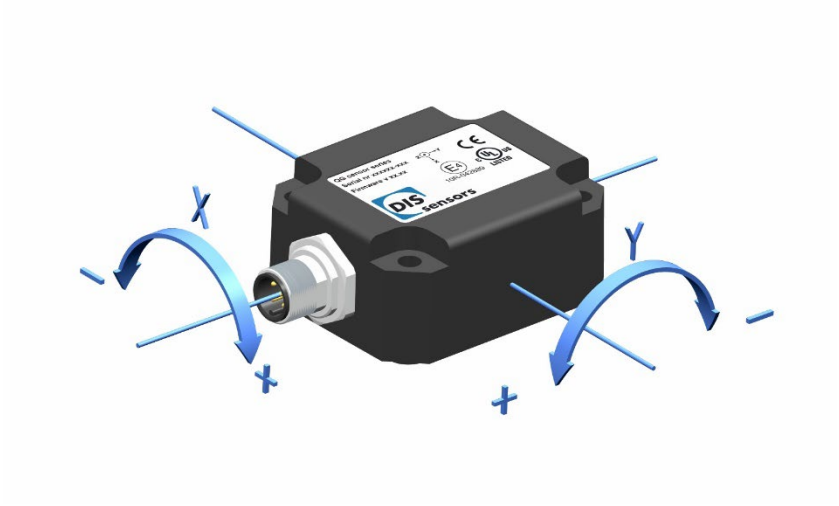

Figure 10 – Measuring axis and direction of 2-axis inclination.

⚠ *Cross-tilt error: when the cross axis (axis perpendicular to the measuring axis) tilts more than 45° during the measurement, the measuring axis will be disabled. The sensor will send a fixed CAN output to indicate that the sensor is now at a cross-tilt error position (→Knowledgebase): 20000$_d$ (200°) for the measuring range ±180°, ±30°/ ±90°, and 40000$_d$ (400°) for the measuring range 0°-360°. In addition, an EMCY message will also be sent, in which the last 5 bytes (00 00 00 00 01/02$_h$) specifies the cross-tilt error on the X or Y axis (→Object 1002h Manufacturer status register).*

6.2.2. Measuring axis and direction for acceleration

In acceleration mode (→6.4 Function mode**)**, the device measures the acceleration values on all 3 axes. The measuring direction of three axes in the factory default setting is shown in Figure 11.

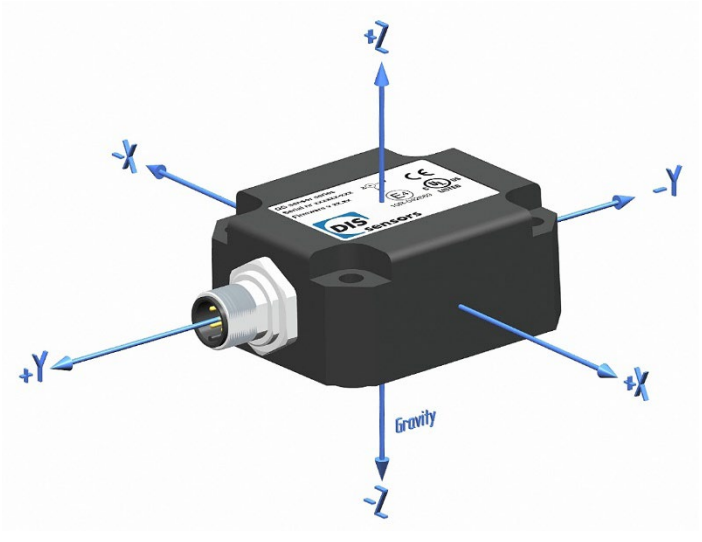

Figure 11 – Measuring axis and direction of acceleration.

DIS makes sense!
ISO 9001 BUREAU VERITAS Certification
Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

6.3. Signal processing

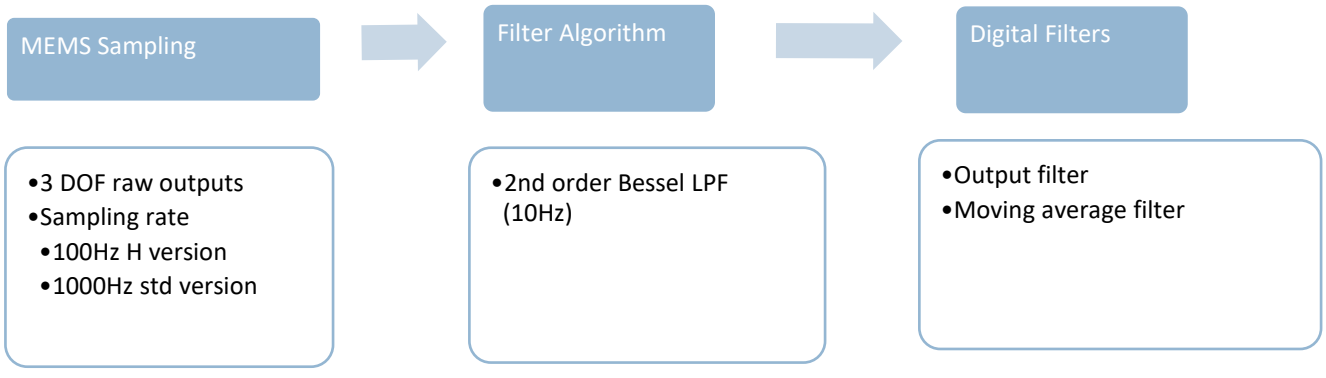

Figure 12 - Signal processing

6.3.1. Sampling rate

Each axis of the acceleration MEMS is sampled by the internal microcontroller at a rate of 100Hz (H version) / 1000Hz (std. version). Those samples are fed into the filter algorithm and will be processed further.

6.3.2. Filter algorithm

Normally, an inclinometer with a bandwidth of 10Hz is fast enough for most applications. Therefore a 2nd order low-pass Bessel filter with a fixed cut-off frequency of 10Hz is implemented. You can only turn this filter ON/OFF with object 3014h. This filter is ON as default and effective on all sensing axes. For standard inclination measurements it is highly recommended to leave this filter on.

6.3.3. Digital filters

The inclination values can be further processed with digital filters, which can significantly eliminate noises or reduce the bandwidth, making the sensor much less sensitive to accelerations or vibrations. Different filters can be enabled/disabled or configured with the DIS configurator set CAN, or with the CAN object dictionary.

Output filter

An additional 1st order low-pass filter called '**output filter'** is implemented for further additional reduction of bandwidth and extra noise filtering. This filter is useful for slow-moving applications with a lower bandwidth than 10Hz. By setting a time-constant τ [1] in object $300E_h$, the cut-off frequency can be calculated by the formula $f = 1 / (2\pi*\tau)$. A longer filter time results in a narrower bandwidth and therefore less noise, but also causes a longer phase delay.

Normally this filter is used in addition to the 2nd order Bessel LPF. Therefore, it does not make sense to set the output filter to a higher frequency than 10Hz (i.e. τ should be >16ms). Common filter time are 50ms (3Hz), 100ms (1.6Hz) or 200ms (0.8Hz).

[1] τ time in which the output changes to 70% of the step after a step response

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

⚠ *This -3 dB frequency is independent of TPDO event time. However, when the output filter time-constant is set to a value lower than the TPDO event time, the output filter is automatically disabled. For example, if TPDO event time is set to 100 ms, and output filter time is set to 50 ms, this filter will not work.*

Moving average filter

The final inclination output is an average of the last N samples. This filter can be used to reduce the noise level further, although it has only limited effect.

The sampling rate of this filter is 10 ms. This filter can be controlled via CAN object $300D_h$.

N must be a number from 0_d-10_d. Setting the N to 0_d and 1_d will disable this filter.

The TPDO event timer decides the cycle time of the TPDO message. By default, the sensor sends a new TPDO every 100 ms. This TPDO message contains an inclination measurement which is an average of the preceding N x 10ms samples and is totally independent of the TPDO event time.

Example:
TPDO event timer = 50 ms, N = 7: every 50 ms, a new average inclination value from the previous 70 ms samples will be supplied in the TPDO message.

ISO 9001 BUREAU VERITAS Certification

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

6.4. Function mode

The QG65/76N2 can measure inclination and acceleration. By selecting the function mode via **object 3007$_h$**, the sensor is configured to function as an inclinometer or accelerometer. Once a function mode is selected, the TPDO mapping parameters (→8.1.12, page 31) are automatically configured with the predefined objects and object entries. The user can also define the TPDO mapping objects manually; the function mode is then changed to Mode FF$_h$ (user defined mode).

Function mode	Output	TPDO mapping objects (1A00$_h$, 1A01$_h$)
Mode 0 (default)	**Inclination (CiA410)**	TPDO1: 6010$_h$ - 00$_h$ (1-axis model) TPDO1: 6010$_h$ - 00$_h$, 6020$_h$ - 00$_h$ (2-axis model) TPDO2: disabled
Mode 1	**Inclination (CiA410) alternative orientation**	TPDO1: 6010$_h$ - 00$_h$ (1-axis model inverted) TPDO1: 6020$_h$ - 00$_h$, 6010$_h$ - 00$_h$ (2-axis model with X and Y swapped, X and Y inverted) TPDO2: disabled
Mode 2	**Inclination (CiA410) + Temperature**	TPDO1: 6511$_h$–00$_h$, 6010$_h$ - 00$_h$, (1-axis model) TPDO1: 6511$_h$–00$_h$, 6010$_h$ - 00$_h$, 6020$_h$ - 00$_h$, (2-axis model) TPDO2: disabled
Mode 3	**Acceleration (3 axes)**	TPDO1: 6401$_h$-01$_h$, 6401$_h$-02$_h$, 6401$_h$-03$_h$ TPDO2: disabled
Mode 4-5	**Reserved**	
Mode 6	**Inclination (compatible with QG65/76 CAN firmware v4B)**	TPDO1: 6401$_h$ – 0E$_h$, (1-axis model) 6401$_h$ - 04$_h$, 6401$_h$ - 05$_h$ (2-axis model) TPDO2: disabled, 6401$_h$ - 01$_h$, 6401$_h$ – 02$_h$, 6401$_h$ – 03$_h$
Mode 7	**Inclination (compatible with QG65/76N CAN firmware v6)**	TPDO1: 6401$_h$ - 04$_h$ (1-axis model) 6401$_h$ - 04$_h$, 6401$_h$ - 05$_h$ (2-axis model) TPDO2: disabled, 6401$_h$ - 01$_h$, 6401$_h$ – 02$_h$, 6401$_h$ – 03$_h$
Mode FF	**User defined mode** (Output defined by user)	TPDO1: user defined TPDO2: user defined

Table 2 – Sensor output configuration in different function modes.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

6.5. Output format

Inclination output format with factory default resolution: CAN output = 100*α. (α = angle in degrees, factory resolution is 0.01°). The resolution can be configured with object 6000_h. CAN outputs are sent with PDOs (→7.3 PDO (Reading sensor output).

For example:

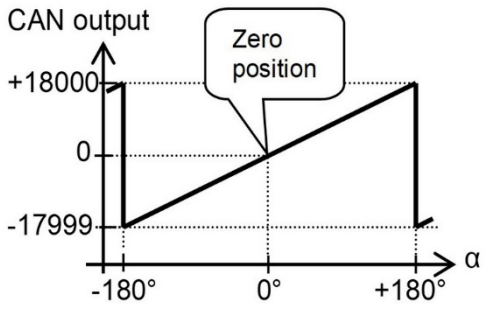

Figure 13 - Output 1-axis ±180° sensor

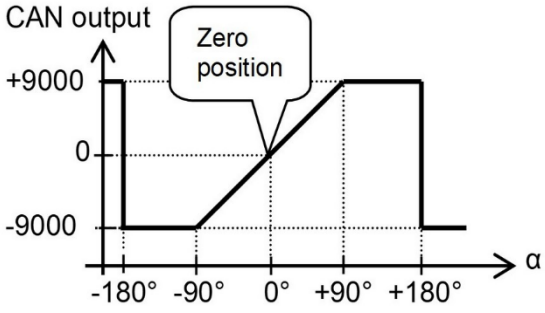

Figure 14 - Output 2-axis ±90° sensor

In Figure 12, the sensor sends 1 axis inclination output with 2 Bytes Integer (Table 3).

Byte1	Byte0
23_h	82_h
Inclination output: $2382_h = 9090_d = 90.9°$	

Table 3 - Output 1-axis ±180° sensor

In Figure 13, the sensor sends 2 axis inclination outputs with 4 bytes integer. The 1st two bytes are the X inclination and the 2nd two bytes are the Y inclination (Table 4).

Byte3	Byte2	Byte1	Byte0
Y inclination		**X inclination**	
00_h	82_h	$0B_h$	$C8_h$
$0082_h = 130_d = 1.3°$		$0BC8_h = 3016_d = 30.16°$	

Table 4 - TPDO1 of QG65N2-KDXYh-090H-CAN-C(F)M

Besides inclination values, the device also provides acceleration, angular rate and device temperature. The user can customise the device outputs by changing the TPDO mapping parameters. (→Object $1A00_h$, $1A01_h$ TPDO Mapping parameter). For example, 1st two bytes are the device temperature, the 2nd two bytes are the inclination output (Table 5).

Byte3	Byte2	Byte1	Byte0
23_h	82_h	00_h	$1A_h$
Inclination output: $2382_h = 9090_d = 90.9°$		Device temperature: $001A_h = 26_d$ °C	

Table 5 - Customised TPDO message

DIS makes sense!
ISO 9001 BUREAU VERITAS Certification
Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

6.6. Boot-up procedure

When the device is powered on, it automatically enters NMT Initialisation state. In this state, the device will be initialised with the last stored parameters of the manufacturer-specific profile area and of the standardized device profile area. When initialisation is complete, a bootup message 00_h will be sent with the heartbeat (700_h + Node ID). If an error is detected during the bootup, an emergency message with the error information will be sent.

After that, the sensor will switch to either “Operational” (default) or “Pre-operational” mode, depending on the value of object $1F80_h$.

6.7. Emergency message

When the device detects an internal error, an emergency object (80_h+Node ID) with 8-bytes message is transmitted. The error code is inserted at the location of object 1003h (pre-defined error field), and the device enters the error state which is defined in Object 1029_h Error Behaviour (default: NMT pre-operational state).

The first 3 bytes indicates the error code specified in CiA301 and error register specified in Object 1001_h. The remaining 5 bytes indicate the manufacturer-specific error specified in Object 1002_h.

Byte7 Byte6 Byte5 Byte4 Byte3	Byte2	Byte1 Byte0
Manufacturer-specific error (1002_h)	**Error register (1001_h)**	**EMCY error code (CiA301)**
00 00 00 00 00_h = no error 00 00 00 00 01_h = X-axis Cross-Tilt Error 00 00 00 00 02_h = Y axis Cross-Tilt Error 00 00 00 00 08_h = EEPROM error More: → 8.1.2 Object 1002h Manufacturer status register	00_h = no error 01_h = Generic error 05_h = Voltage error 81_h = Manufacturer specific error More: → 8.1.1 Object 1001h Error register	00 00_h = No error. Always sent at start-up 10 xx_h = Generic error 50 00_h = Voltage error 50 10_h = Self-test error 50 30_h = Error during sensor initialization 60 00_h = Watchdog error 60 00_h = Error handler activated 62 00_h = Device software error 80 00_h = Sent at every change of the manufacturer status register 81 xx_h = CANopen stack message 82 xx_h = CANopen stack message FF 20_h = EEPROM error

Table 6 – format EMCY message

Examples:

00 00 00 00 01 05 50 00_h – Voltage error detected during initialization

00 00 00 00 01 81 80 00_h – Cross-tilt error on X axis

When all errors are corrected, the device enters the error-free state and transmits an emergency object with the error code ‘reset error / no error’ containing all 0 s.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

6.8. LSS (Layer Setting Service, according to CiA305-DSP)

Layer setting services (LSS) and protocols are used to request or change the settings of three parameters of the physical layer, data link layer and application layer on a CANopen device via the CAN network. It is supported only in NMT stop mode or pre-operational mode.

The QG65/76N2 device is serviced as a CAN device, and a CAN master such as a PLC can detect and configure those three parameters with LSS:

- Node ID (→object 3000_h)
- CAN bus bit rate (→object 3001_h)
- LSS address: 128-bit number to identify each node uniquely, consisting of the vendor ID, product code, revision number and serial number with 32 bits each (→object 1018_h)

After changing parameters using LSS, a save action must be performed. Normally your LSS tool can be configured to perform an automatic save (store), as shown below:

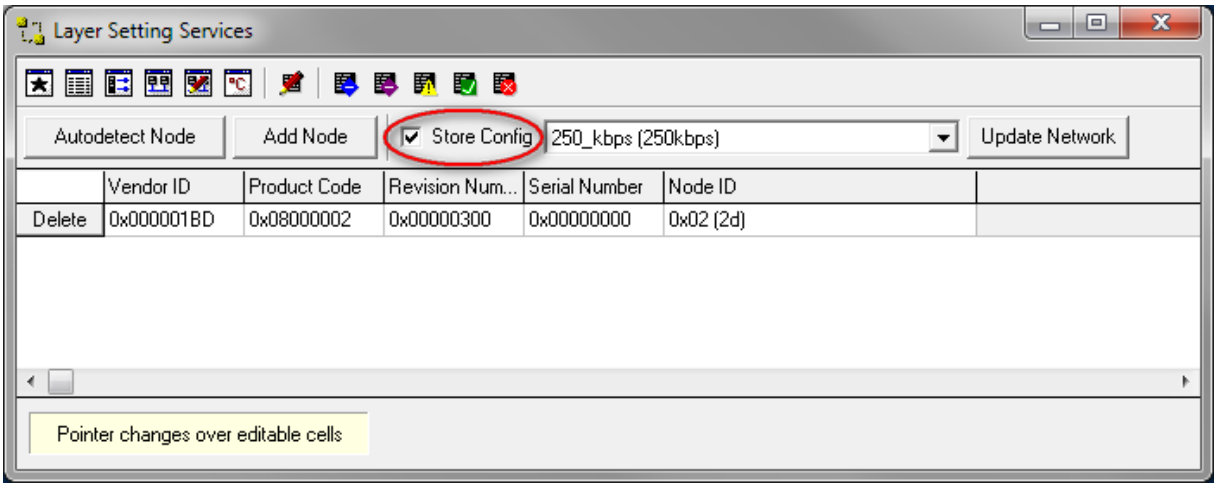

Figure 15 - LSS save action

6.9. Firmware management

If a firmware version is mentioned on the label, it is the factory-installed firmware number.



Figure 16 - Firmware version

It can also be requested with object $100A_h$ Manufacturer software version. The message format is “Vx.x.x” in ASCII, for example: V1.0.0.

DIS makes sense!
ISO 9001 BUREAU VERITAS Certification
Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

⚠ *The currently-installed firmware version might vary from the version on the sticker due to a firmware update. Always check the actual version in the object dictionary.*

It will soon be possible to update the firmware via the DIS configuration tool. This tool can check the current firmware version in your device and upload the new firmware to the device. The user can upload the new firmware to the device by simply clicking a button (Figure 16).

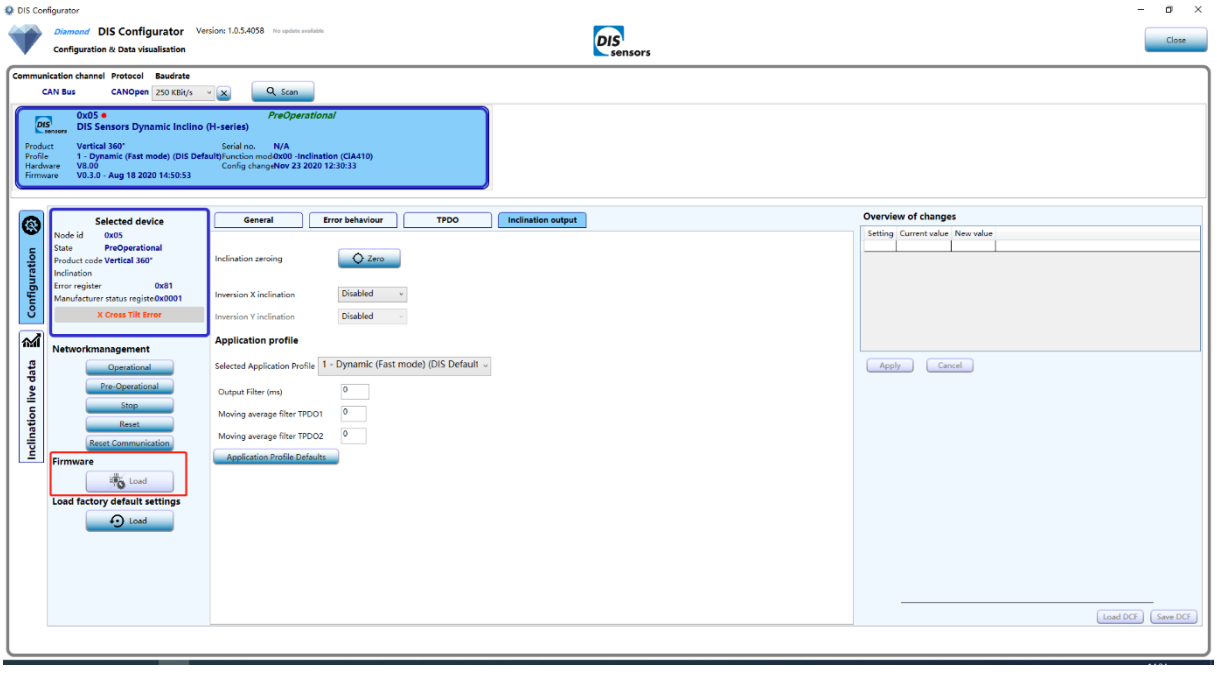

Figure 17 - Firmware update via configurator

The firmware release notes are available at www.dis-sensors.com under “downloads/user manuals”.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

6.10. Load factory default settings

Factory reset or load factory default settings allows users to restore the device to its original manufacturer settings. The customer settings which were saved to the EEPROM will be overwritten by the factory default settings.

With object 1011_h, the factory default settings below can be restored. Customised products may have different factory default values, which may deviate from this manual. See the datasheet of your customized products for these customized factory default values.

DIS factory default - communication parameters

Parameters	Object	DIS standard default value
COB-ID SYNC	1005_h	00000080_h
Communication Cycle Period	1006_h	00_h
COB-ID EMCY	1014_h	00000081_h
Producer heartbeat time	1017_h	2000_d = 2000 ms
Error behaviour	1029_h	00_h = Switch to pre-operational
NMT Start-up behaviour	$1F80_h$	00000000_h = Start in operational
Node ID	3000_h	01_h
Baud Rate	3001_h	03_h = 250 kBit/s
Termination resistor	3003_h	00_h = Disabled
Error masks	$301E_h$	$80001D40_h$

Table 7 – DIS standard factory default communication parameters

DIS standard factory default - application parameters

Parameters	Object	DIS standard default value
Function mode	3007_h	00_h – Inclination (CiA 410)
Moving Average filtering	3022_h sub 07_h and $300D_h$	00_h – Moving Average filtering OFF
Output Filter time	3022_h sub 06_h and $300E_h$	00_h – Output filter OFF
Operating parameters	6011_h, 6021_h	02_h – DIS default measuring direction Pre-set enabled
Pre-set inclination value (Zero value) **Offset inclination value (Zero offset)**	6012_h, 6022_h 6013_h, 6023_h	00_h Zero offset by calibration at factory. Various per sensor
Sub Range Limit	3032_h	00_h = Disabled

Table 8 – DIS standard factory default application parameters.

DIS makes sense!

ISO 9001 BUREAU VERITAS Certification

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

6.11. Zero adjustment

Zero adjustment allows users to compensate for mechanical offsets of a horizontally mounted 2-axis device or set a customised 0° position of a vertically mounted 1-axis sensor. The measured inclination value at the 0° position will be stored in the device as a permanent offset, which is used to calculate the actual inclination output of the device. The zero offset value can be read from → Object 6013_h, 6023_h Offset inclination value. (page 38)

Zero adjustment can be done in 2 ways and can be repeated at any time.

1. **Via → Object 300Fh Zero adjustment.**
   The zero adjustment can be done for each axis separately or for all axes at the same time. Status information of the result is available from object 300Fh. The offset value will be stored permanently in the device without "save" to object 1010_h.
2. **Via → Object 6012h, 6022h Pre-set inclination value.**
   To set the output of X/Y axis to 0°, write 0000_h to object 6012_h / 6022_h at your desired 0° position. The offset will be stored in Object 6013_h, 6023_h Offset inclination value. Those parameters must be saved to the device (→ 8.1.6 Object 1010_h Store parameters.)

1-axis ±180° sensors can be zero adjusted over the full range, the position of the male connector is at customer discretion. 2-axis ±30°/±90° sensors can only be zero adjusted in a horizontal position within an offset limit of ±5°.

After you load factory default settings, the sensor will be restored with the factory zero offset, which means the pre-set inclination value will be restored to 00_h, object 6013_h and 6023_h will be rewritten to a factory default value and you need to zero your sensor again.

6.12. EDS & DCF

The "Electronic Data Sheet" (EDS file) is a file format that describes the communication behaviour and the object dictionary entries of a device. In fact, it is a template. This allows tools such as CAN configuration tools to handle the device properly. The file format is described in CiA306 V1.3.0.

The EDS file contains all possible settings and functions for the device by describing the CAN object dictionary for the device to be set by CAN commands.

The EDS file does not contain a customer specific configuration description (the values of the object dictionary, such as the chosen baud rate, TPDO1 event time, Node ID, etc.). For this purpose, the customer can generate a DCF file (Device Configuration File) with all customer specific settings in the same format as the EDS file. The DCF file is in fact an emulation of the EDS file.

After loading the DCF file into the device, the settings can be stored permanently into the EEPROM. (→ 8.1.6 Object 1010_h Store parameters)

The EDS files are available at www.dis-sensors.com under "downloads".

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

6.13. Mappable objects

Objects that can be mapped into TPDO message.

Index	Subindex	Type	Object name and description
1001_h	**00_h**	U8	**Error register** 00_h – No error 81_h – Error detected
1002_h	**00_h**	U8	**Manufacturer status register**
1013_h	**00_h**	U32	**High Resolution Timestamp**
$301F_h$			**Manufacturer status register mapping**
	00_h	U8	Highest subindex supported
	01_h	U8	Manufacturer Status Register bits 0 - 7
	02_h	U8	Manufacturer Status Register bits 8 - 15
	03_h	U8	Manufacturer Status Register bits 16 - 23
	04_h	U8	Manufacturer Status Register bits 24 - 31
6010_h	**00_h**	S16	**Inclination X-axis (longitudinal)** Output X-axis. Inclination [°] with the resolution in object 6000_{hse}
6020_h	**00_h**	S16	**Inclination Y-axis (lateral)** Output Y axis. Inclination [°] with the resolution in object 6000_h
6401_h			**Sensor Outputs**
	00_h	U8	Highest subindex supported
	01_h	S16	X acceleration [mg]
	02_h	S16	Y acceleration [mg]
	03_h	S16	Z acceleration [mg]
	04_h	S16	X inclination scale ±180° [0.01°]
	05_h	S16	Y inclination scale ±180° [0.01°]
	06_h	S16	Reserved
	07_h	S16	Reserved
	08_h	S16	Reserved
	09_h	S16	Reserved
	$0A_h$	S16	Temperature [0.1 °C]
	$0B_h$	S16	Reserved
	$0C_h$	S16	Reserved
	$0D_h$	S16	Reserved
	$0E_h$	U16	X inclination scale 0°-360° [0.01°]
	$0F_h$	U16	Reserved
6511_h	**00_h**	S16	**Device Temperature [1ºC]**

Table 9 - Mappable objects

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7. CANopen specification

The QG65/76N2 series of devices communicates with the CANopen interface according to CiA 301. The device profile CiA 410 is implemented. All parameters and measured values can be accessed by the Object dictionary. More knowledge of CANopen sensors can be found in our **Knowledgebase**.

7.1. CANopen Communication Objects (COB)

A CANopen device contains a communication module that provides communication objects and the appropriate functionality to transport data items via the underlying network structure. In other words: objects that you send or receive from the device for different communication purposes.

The communication objects are described by the services and protocols. Objects we often use:

Common COBs	Description
SDO	Service Data Object provides direct access to object entries of a CANopen device's object dictionary
PDO	Process Data Object is used to transfer real-time data
NMT	Network Management object is used to execute network management services to initialize, monitor, restart or stop the sensor
SYNC	Synchronization object provides the basic network synchronization mechanism
EMCY	Emergency object is used to indicate internal errors
Heartbeat	Heartbeat is produced by the device to indicate its status. It Is one of the error control services in CANopen.
LSS	Layer Setting Service (LSS) enables the LSS master to modify the LSS slaves' node-ID and to switch the entire network from one data rate to another.

Table 10 – Common communication objects

7.2. Predefined CAN-IDs

Every CAN message on the bus starts with a CAN-ID. A CAN device that uses 11-bit identifiers is commonly called CAN 2.0 A and a CAN device that uses 29-bit identifiers is commonly called CAN 2.0B. For CANopen sensors, DIS Sensors implements an 11-bit CAN-ID which consists of a 4-bit function code and 7-bit Node ID.

Examples:

Object SYNC has function code 0001b, resulting CAN-ID 000,1000,0000b=080h.

Object TPDO1 has function code 0011b, resulting CAN-ID 001,1000,0000b=180h.

ISO 9001 BUREAU VERITAS Certification

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

CiA has pre-defined CAN-IDs for common CAN objects as below:

CAN objects	CAN-ID
NMT	000_h
SYNC	080_h
Emergency	080_h + Node ID
TPDO1	180_h + Node ID
TPDO2	280_h + Node ID
SDO tx (server -> client)	580_h + Node ID
SDO rx (client -> server)	600_h + Node ID
Heartbeat	700_h + Node ID

Table 11 – Predefined CAN-ID of common objects.

7.3. PDO (Reading sensor output)

The Process Data Object (PDO) is used to process real time data. The measured values such as inclination, temperature, etc. are sent with TPDOs. PDOs are transmitted in the NMT operational state only and may be transmitted when a mapped process data item changes.

A DIS device supports 2 TPDOs. In factory default mode, TPDO1 sends the sensor output, TPDO2 is disabled. The communication parameters of TPDOs can be configured with object 1800_h and 1801_h. The data transmitted with TPDOs can be configured with TPDO mapping parameters object $1A00_h$ and $1A01_h$.

7.4. SDO (configuring Object Dictionary)

The Service Data Object (SDO) is used to set and request values from the object dictionary. There are three types of SDO services used to transmit data. In this context, the device is considered as a server (owner of the object dictionary) and communication is viewed from the server.

SDO Services	Description	SDO Request (600_h + Node ID)	SDO Response (580_h + Node ID)
SDO upload	Read from device Server -> Client	40_h = Expedited Read	43_h = Read reply 4 bytes 47_h = Read reply 3 bytes $4B_h$ = Read reply 2 bytes $4F_h$ = Read reply 1 bytes
SDO download	Write to device Client -> Server	23_h = Expedited Write, 4 Bytes 27_h = Expedited Write, 3 Bytes $2B_h$ = Expedited Write, 2 Bytes $2F_h$ = Expedited Write, 1 Byte	60_h = Write Reply
SDO abort transfer	Indicates error		80_h = Error/Abort code

Table 12 - Expedited SDO transfer command specifier

Common SDOs to configure sensors and SDO abort codes can be found in the knowledge base.

7.5. NMT state

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

CANopen devices are initialized, started, monitored, reset or stopped using NMT services. The NMT state of the device can be set by applications such as PLC software. Table 12 shows the communication objects that exist in each NMT state.

NMT State	PDO	SDO	SYNC	EMCY	Heartbeat	Description
Pre-operational	✗	✓	✓	✓	✓ $7F_h$	Configuration mode: PDOs do not exist. This is the recommended mode for configuration of PDOs.
Operational	✓	✓	✓	✓	✓ 05_h	Take care with configuration in this mode, as some objects are protected and may not be changed in this mode.
Stopped	✗	✗	✗	✗	✓ 04_h	All communication is forced to stop except the heartbeat/node guarding.
Bootup	✗	✗	✗	✗	✓ 00_h	Device is initialised with default power-on values

Table 13 – NMT states and communication objects

7.6. Object Dictionary (device parameters)

The object dictionary is a collection of data items that influence the behaviour of the application objects, the communication objects and the state machine used on this device. Each object is addressed using a 16-bit index and an 8-bit subindex.

Index Range	Object	Description
1000_h – $1FFF_h$	Communication profile area	Parameters for communication such as SDO, PDO, NMT etc.
2000_h – $5FFF_h$	Manufacturer-specific profile area	Parameters for device-specific features such as function mode, etc.
6000_h – $9FFF_h$	Application profile area	Parameters that are common for inclinometers.
Other	Reserved for factory use	Do not use

Table 14 – Structure of object dictionary

All parameters in the object dictionary can be accessed with SDOs.

See also 8. CAN Object dictionary overview.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8. CAN Object dictionary overview

8.1. Communication profile (Index 1000h - 1FFFh)

Index	Subindex	Data Type	Access	Object Name and description	Factory Default	Detail
1000h	00h	U32	r	**Device type** (complies with device profile CiA410)	0101019Ah – 1-axis inclination 0102019Ah – 2-axis inclination	
1001h	00h	U8	r	**Error register** 00h – No error 81h – Error detected	00h	8.1.1
1002h	00h	U8	r	**Manufacturer status register**	00000000h – No error	8.1.2
1003h				**Predefined error field**		8.1.3
	00h	U32		Number of errors. Range: 00h to FEh	00h	
	01h...FEh	U32	r	Error Code	NA	
1005h	00h	U32	rw	**COB-ID SYNC**	00000080h	8.1.4
1006h	00h	U32	r	**Communication cycle period**	00000000h – No SYNC transmission	8.1.5
1008h	00h	VSTR	const	**Manufacturer device name**	DIS Sensors QGxxN2 CANopen (High acc.) DIS Sensors QGxxN2 CANopen (Std acc.)	
1009h	00h	VSTR	const	**Manufacturer hardware version**	Depends on sensor. e.g. “V8.0”	
100Ah	00h	VSTR	const	**Manufacturer software version**	Depends on sensor. e.g. “V1.0.0”	
1010h				**Store parameters**	Write "save" or “65766173h” to subindex 01h to 04h	8.1.6
	00h	U8	const	highest subindex supported	04h	
	01h	U32	rw	Save all parameters		
	02h	U32	rw	Save communication parameters.		
	03h	U32	rw	Save application parameters		
	04h	U32	rw	Save manufacturer specific parameters		
1011h				**Restore default parameters**	Write "load" or “64616F6Ch” to subindex 01h to 04h	8.1.7
	00h	U8	const	Highest subindex supported	04h	
	01h	U32	rw	Restore all parameters		
	02h	U32	rw	Restore communication parameters		
	03h	U32	rw	Restore application parameters		
	04h	U32	rw	Restore manufacturer specific parameters		
1013h	00h	U32	rw	**High Resolution Timestamp**	00h	
1014h	00h	U32	rw	**COB-ID EMCY**	00000081h (80h + Node ID)	8.1.8
1017h	00h	U16	rw	**Producer heartbeat time**	7D0h – 2000 ms	
1018h				**Identity object**		
	00h	U8	const	Highest subindex supported	04h	
	01h	U32	r	Vendor ID	000001BDh	
	02h	U32	r	Product code	09000001h – 1-axis inclination 360° 09000002h = 2-axes inclination ±90° 09000003h = 2-axes inclination ±30°	
	03h	U32	r	Revision number	00010000 h = V1.0.0	
	04h	U32	r	Serial number	e.g. 77542822h = 2002004-002d	
1020h				**Verify configuration**		8.1.9
	00h	U8	const	Highest subindex supported	02h	
	01h	U32	rw	Configuration date	number of whole days since 1-1-1984	
	02h	U32	rw	Configuration time	number of ms since midnight	
1029h				**Error behaviour**		8.1.10
	00h	U8	const	Highest subindex supported	02h	
	01h	U8	rw	Communication error 00h = switches to pre-operational 01h = does not change state 02h = switches to stopped 03h ... FFh = reserved	00h	

DIS makes sense!

ISO 9001 BUREAU VERITAS Certification

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Index	Subindex	Data Type	Access	Object Name and description	Factory Default	Detail
	02h	U8	rw	Profile- or manufacturer-specific error 00h = switches to pre-operational 01h = does not change state 02h = switches to stopped 03h … FFh = reserved	00h	
1800h				**TPDO1 communication parameter**		8.1.11
	00h	U8	const	Highest subindex supported	05h	
	01h	U32	rw	COB-ID used by TPDO1 40000181h = TPDO1 enabled C0000181h = TPDO1 disabled	40000181h (CAN-ID of TPDO1: 180h + Node ID)	
	02h	U8	rw	Transmission type FFh = event-driven 01h = sync	FFh	
	03h	U16	rw	Inhibit time	0000h	
	05h	U16	rw	Event timer	0064h = TPDO1 event time 100 ms	
1801h				**TPDO2 communication parameter**		8.1.11
	00h	U8	const	Highest subindex supported	05h	
	01h	U32	rw	COB-ID used by TPDO2 40000281h = TPDO2 enabled C0000281h = TPDO2 disabled	C0000281h (CAN-ID of TPDO2: 280h + Node ID)	
	02h	U8	rw	Transmission type FFh = event-driven 01h = sync	FFh	
	03h	U16	rw	Inhibit time	0000h	
	05h	U16	rw	Event timer	0064h = TPDO2 event time 100 ms	
1A00h				**TPDO1 mapping parameter**		8.1.12
	00h	U8	rw	Number of mapped application objects in TPDO	01h = 1 axis ±180° 02h = 2 axes ±30°/±90°	
	01h	U32	rw	Mapping object1	60100010h	
	02h	U32	rw	Mapping object2	60200010h	
	03h	U32	rw	Mapping object3	00000000h	
	04h	U32	rw	Mapping object4	00000000h	
1A01h				**TPDO2 mapping parameter**		8.1.12
	00h	U8	rw	Number of mapped application objects in TPDO	00h = Disabled	
	01h	U32	rw	Mapping object1	64010110h	
	02h	U32	rw	Mapping object2	64010210h	
	03h	U32	rw	Mapping object3	64010310h	
	04h	U32	rw	Mapping object4	00000000h	
1F80h	00h	U32	rw	**NMT Start-up behaviour** 00000004h: start in state pre-operational 00000000h: start in state operational	00000000h	8.1.13

Table 15 - Communication Profile

⚠ *To permanently save communication parameters in the EEPROM of the device, use only CAN Object 1010h, otherwise the changes will be lost after a power cycle. All indices and/or subindices not described in the table are reserved exclusively for factory use.*

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.1.1. Object 1001h Error register

This object indicates the type of a detected error. This is a part of the EMCY message (→6.7 Emergency message).

Bit	Error type	Example
0	Generic error	00h - No error (this bit is set to 1 whenever another error bit is set)
1	Current	03h
2	Voltage	05h
3	Temperature	09h
4	Communication error	11h
5	Device profile specific	21h
6	Reserved, always 0	
7	Manufacturer-specific	81h - Manufacturer error detected

Table 16 – Error register

8.1.2. Object 1002h Manufacturer status register

This object defines the manufacturer error codes. Each bit represents a specific type of error. When an error is detected, the bit will be set to 1. This is a part of the EMCY message (→ 6.8 Emergency message).

Bit	Error
Bit 0	Inclination X axis (longitudinal) cross tilt error
Bit 1	Inclination Y axis (lateral) cross tilt error
Bit 2	Inclination X axis (longitudinal) out of range indication
Bit 3	Inclination Y axis (lateral) out of range indication
Bit 4	Temperature Under operational limit (e.g. T < -40°C, specified in the datasheet.)
Bit 5	Temperature Over operational limit (e.g. T > +85°C, specified in the datasheet.)
Bit 6	Actual power error (e.g. supply voltage too low)
Bit 7	Power error since last reset (memorized)
Bit 8	EEPROM Error
Bit 9	Flash Error
Bit 10	Sensor element Error
Bit 11	Watchdog Error
Bit 12	Error handler activated Error
Bit 13-31	Unused Error bits

Table 17 - Manufacturer error code

The error code can be mapped into the TPDO message via Object 301Fh.

DIS makes sense!

ISO 9001 BUREAU VERITAS Certification

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

E.g. (2 axis model)

Error code (Byte 3-7)	Error description
00 00 00 01	When Y tilts > ±45°, X axis is disabled, bit 0 is set to 1.
00 00 00 02	When X tilts > ±45°, Y axis is disabled, bit 1 is set to 1.
00 00 00 06 (0110)	When X tilts> ±90°, X is out of range and Y axis is disabled due to cross tilt error, bit 2 and bit 1 both set to 1.
00 00 00 09 (1001)	When Y tilts >±90°, Y is out of range and X axis is disabled due to cross tilt error, bit 3 and bit 0 both set to 1.
00 00 00 0C (1100)	When X and Y both tilts >±90°, bit 2 and bit 3 are set to 1.

Table 18 - Example manufacturer error code

8.1.3. Object 1003h Predefined error field

This object provides an error history of the device. The error codes are saved in the subindex starting with 01h. The most recent error is always shown on the top. These error codes are transmitted with the emergency object.

- Subindex 00h indicates the number of existing errors that are recorded in the array starting at subindex 01h.
- If an error is detected, the error code will be stored in subindex 01_h and higher. Same error code will also be sent via the emergency object. In doing so it provides an error history.

Subindex	Description	Value
00_h	Number of errors detected	No error: 00_h
01_h	The latest error code	See 6.7 Emergency message
02_h … 10_h	Oldest error - highest subindex A maximum of 16 errors (emergency messages) are stored.	

Table 19 - Predefined error field

⚠ *Writing 00h to subindex 00h will delete the entire error history.*

The error message in object 1003 is not the full EMCY message, it contains only the error code and the manufacturer-specific error.

Byte3	Byte2	Byte1	Byte0
Manufacturer-specific error (1002_h)		**Error Code (CiA301)**	
Byte1	Byte0	Byte1	Byte0

Table 20 - message structure 1003h

ISO 9001 BUREAU VERITAS Certification

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.1.4. Object 1005h COB-ID SYNC message

The structure of the COB-ID of SYNC object is specified as below:



Default COB-ID is 00000080h, which means:

- 11-bit CAN-ID is valid by default
- CAN-ID of SYNC is 080h

8.1.5. Object 1006h Communication cycle period

This object defines the SYNC interval. The value must be supplied as a multiple of µs. If the value is set to 0000 0000h the transmission of SYNC messages will be disabled.

8.1.6. Object 1010_h Store parameters

Use this object to save the customised settings such as Node ID, baud rate, etc. to the internal EEPROM. User can store parameters in both NMT operational and pre-operational state.

Procedures:



- Write “save” to sub-index 01h = All parameters will be stored.
- Write “save” to sub-index 02h = Parameters of communication profile (Index 1000_h - $1FFF_h$) will be stored.
- Write “save” to sub-index 03h = Parameters of application profile (Index 6000_h - $9FFF_h$) will be stored.
- Write “save” to sub-index 04h = Parameters of manufacturer-specific profile (Index 2000_h-$5FFF_h$) will be stored.
- Write “save” in ASCII or “65766173h” have the same effect.

⚠ *An NMT request or a new power cycle is required to enable the stored settings.*

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.1.7. Object 1011h Restore factory default parameters

Use this object to restore the factory default values for the parameters of the communication profile, device profile and application profile. The factory default values of standard DIS devices are specified in Table 7, Table 8 and the object dictionary overview tables. Customised devices may have different factory default values, which may deviate from this manual. See the datasheet of your customized product for these customized factory default values. You can restore the factory default in both NMT operational and pre-operational state.

Procedures:



- Write "load" to sub-index 01h = All parameters will be restored.
- Write "load" to sub-index 02h = Parameters of communication profile (Index 1000_h - $1FFF_h$) will be restored.
- Write "load" to sub-index 03h = Parameters of application profile (Index 6000_h - $9FFF_h$) will be restored.
- Write "load" to sub-index 04h = Parameters of manufacturer-specific profile (Index 2000_h-$5FFF_h$) will be restored.
- Write "load" in ASCII or "64616F6Ch" have the same effect.

⚠ *A direct NMT restart or new power cycle is required to enable the factory default settings after a "load". Do not execute "save" before you restart the device, as this will cause the current working environment settings to overwrite (i.e. store) the default factory settings (see 8.1.6 above).*

8.1.8. Object 1014h COB-ID EMCY

This object configures the COB-ID for the EMCY write service. The factory default COB-ID of EMCY is 00000081_h, which indicates:

- EMCY exists (bit31=0)
- 11-bit CAN-ID is valid
- CAN-ID of EMCY is 81_h (default: 80_h + Node ID 01_h)

⚠ *It is not recommended to change the CAN-ID of EMCY to a different value.*

8.1.9. Object 1020h verify configuration

This object provides the downloaded configuration date and time. It is used by configuration tools to compare the current device configuration date with their DCF files and determine whether reconfiguration is necessary.

8.1.10. Object 1029h error behaviour

This object configures the device to enter the selected NMT state when a serious failure is detected. By default, subindex 01h and 02h are both preconfigured with the default value of 00h, which means the device shall autonomously enter pre-operational state.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Subindex	Error type	Error behaviour
01h	Communication error	00_h = Change to NMT state pre-operational (only if currently in NMT state Operational) 01_h = No change of the NMT state 02_h = Change to NMT state Stopped 03_h … FF_h = reserved
02h	Profile- or manufacturer-specific error	

Table 21 – Object 1029_h error behaviour

Failures include the following communication errors:

- Bus-off state of the CAN interface
- Life guarding event with the state ‘occurred’ and the reason 'time out'
- Heartbeat event with state ‘occurred’ and the reason 'time out"
- Device internal failures

8.1.11. Object 1800_h, 1801_h TPDO communication parameter

The QG65/76 N2 series device supports 2 TPDOs: object 1800h configures the communication parameters of TPDO1; object 1801h configures those of TPDO2.

Subindex	Description	Value
01h	**Defines the COB-ID of TPDO** Default CAN-ID of TPDO1 = 180h + Node ID. Default CAN-ID of TPDO2 = 280h + Node ID.	4000181_h = Enable TPDO1 $C000181_h$ = Disable TPDO1
02h	**TPDO transmission type** Synchronous: TPDO is transmitted after the SYNC Event-driven: TPDO is transmitted at any time based on the occurrence of an internal event.	01_h = synchronous FF_h = event-driven (default)
03h	**Inhibit time**	0000_h = Disabled
05h	**Event timer** defines the interval of TPDO. The value is defined as multiple of 1 ms.	0064_h = TPDO1 event time 100 ms 0000_h = Disabled.

Table 22 - TPDO communication parameter

8.1.12. Object $1A00_h$, $1A01_h$ TPDO Mapping parameter

Object $1A00_h$ contains the mapping parameters for TPDO1.

Object $1A01_h$ contains the mapping parameters for TPDO2.

The value indicates the index, subindex of the mapped object, and the data length.

For example, with factory default settings:
- TPDO1 mapping parameter of a 1-axis ±180° inclinometer is configured as in Table 19
- TPDO1 mapping parameter of a 2-axis ±30°/±90° inclinometer is configured as in Table 20
- TPDO2 mapping is disabled by default.

$1A00_h$	TPDO1 mapping parameter	Object description	
00_h	Number of mapped application objects in TPDO1	01_h	TPDO1 consists of value from only 1 object.
01_h	Mapping object1	60100010_h	Index: 6010_h, subindex: 00_h, data length: 10_h=16bits. Inclination X-axis (longitudinal)

Table 23 – Default mapping parameters of TPDO1 1-axis ±180°

DIS makes sense!

ISO 9001 BUREAU VERITAS Certification

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1A00h	TPDO1 mapping parameter	Object description	
00h	Number of mapped application objects in TPDO1	02h	TPDO1 consists of value from 2 objects.
01h	Mapping object1	60100010h	Index: 6010h, subindex: 00h, data length: 10h=16bits. Inclination X-axis (longitudinal)
01h	Mapping object1	60200010h	Index: 6020h, subindex: 00h, data length: 10h=16bits. Inclination Y-axis (lateral)

Table 24 – Default mapping parameters of TPDO1 2-axis ±30°/±90°

TPDO mapping procedure

The following procedure must be used for re-mapping, which may take place during either of the NMT states Pre-operational and Operational.



Step	Description	Value example
1	Disable TPDO	$1800_h.01_h = C0000181_h$ $1801_h.01_h = C0000281_h$
2	Disable TPDO mapping	$1A00_h.00_h = 00_h$ $1A01_h.00_h = 00_h$
3	Modify mapping by changing the values of the corresponding subindices.	$1A00_h.01_h = 60100010_h$ $1A00_h.02_h = 60200010_h$ $1A01_h.01_h = 64011010_h$
4	Enable mapping by setting subindex 00h to the number mapped objects.	$1A00_h.00_h = 02_h$ $1A01_h.00_h = 01_h$
5	Enable TPDO	$1800_h.01_h = 40000181_h$ $1801_h.01_h = 40000281_h$

Table 25 – Procedure for configuring TPDO mapping parameters

The TPDO mapping parameters various according to the user-selected Function Mode.

8.1.13. Object 1F80h NMT start-up behaviour

This object configures the NMT start-up state. In factory default configuration, the device enters NMT Operational state after it passes all internal tests. In this state, device output will be sent with TPDO1, and a heartbeat with value "05_h" will be sent indicating that the sensor is now in "Operational" state. To have the device start instead in "Pre-operational" state, write "00000004_h" to this object.

Value	Description
00000000h	Start in state Operational (default setting for DIS devices)
00000004h	Start in state Pre-operational

Table 26 – NMT start-up state configuration

ISO 9001 BUREAU VERITAS Certification

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.2. Manufacturer-specific profile (2000h - 5FFFh)

Index	Subindex	Data type	Access	Object name and description	Factory default	Detail
3000h	00h	U8	rw	**Node ID** (Range: 01h - 7Fh)	01h	
3001h	00h	U8	rw	**Baud Rate** 00h = 1000 kBit/s 01h = 800 kBit/s 02h = 500 kBit/s 03h = 250 kBit/s 04h = 125 kBit/s 05h = 100 kBit/s 06h = 50 kBit/s 07h = 20 kBit/s 08h = 10 kBit/s	03h	
3003h	00h	U8	rw	**CAN bus termination resistor 120 Ω** 00h: Disable 01h: Enable	00h	4.4
3007h	00h	U8		**Function Mode**	00h	8.2.1
			rw	00h = Mode 0		
			rw	01h = Mode 1		
			rw	02h = Mode 2		
			rw	03h = Mode 3		
				04h and 05h reserved		
			rw	06h = Mode 6		
			rw	07h = Mode 7		
			r	FFh = Mode FF (user defined mode)		
300Dh				**Moving average filter**		8.2.6
	00h	U8	r	Highest subindex supported		
	01h	U8	rw	Moving average number N for TPDO 1	00h	
	02h	U8	rw	Moving average number N for TPDO 2	00h	
300Eh	00h	U16	rw	**Output filter**	00h	8.2.5
300Fh	00h	U8	rw	**Zero adjustment Inclination** 01h Start zero adjustment X-axis 02h Start zero adjustment Y-axis 03h Start zero adjustment X and Y axis	00h	8.2.2
3014h	00h	U8	rw	**Lowpass filter** (2nd order Bessel cut-off frequency 10Hz) 00h = OFF , 01h = ON	01h	8.2.7
301Eh	00h	U32	rw	**Manufacturer status register error mask** mask which bits will trigger the manufacturer-specific error behaviour.		8.2.3
301Fh				**Manufacturer status register mapping**		8.2.4
	00h	U8	r	Highest subindex supported		
	01h	U8	r	Manufacturer Status Register bits 0 - 7		
	02h	U8	r	Manufacturer Status Register bits 8 - 15		
	03h	U8	r	Manufacturer Status Register bits 16 - 23		
	04h	U8	r	Manufacturer Status Register bits 24 - 31		
3032h				**Sub Range Limits**		8.2.8
	00h	U8	r	Highest subindex supported		
	01h	S16	r	Lower Sub Range Limit	00h	
	02h	S16	r	Upper Sub Range Limit	00h	

Table 27 – Application-specific profile

DIS makes sense!

ISO 9001 BUREAU VERITAS Certification

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

⚠ *To permanently save application-specific parameters in the EEPROM of the device, use only CAN Object 1010h, otherwise the changes will be lost after a power cycle. All indices and/or subindices not described in the table are reserved exclusively for factory use.*

8.2.1. Object 3007h Function mode

Use this object to select a function mode (→ 6.4. Function mode).

Access	Value	Function Mode	Description
rw	00h	Mode 0	**Inclination (CiA410)**
rw	01h	Mode 1	**Inclination (CiA410) alternative orientation** (X and Y swapped, X and Y inverted)
rw	02h	Mode 2	**Inclination (CiA410) + Temperature**
rw	03h	Mode 3	**Acceleration (3 axes)** (Pure acceleration without dynamic effects compensation)
		Mode 4-5	**Reserved**
rw	06h	Mode 6	**Inclination (compatible with QG65/76 CAN firmware v4B)**
rw	07h	Mode 7	**Inclination (compatible with QG65/76N CAN firmware v6)**
r	FFh	Mode FF	**User defined mode** (Output defined by user)

Table 28 - function mode

8.2.2. Object 300Fh Zero adjustment Inclination

To perform a zero adjustment, write the corresponding value to subindex 00h (→ 6.11 Zero adjustment).

Write to 300Fh 00h		Response by reading 300Fh 00h
01h	Start zero adjustment X-axis - inclination	00h = Successful; FFh = Failed
02h	Start zero adjustment Y axis - inclination	00h = Successful; FEh = Failed
03h	Start zero adjustment X and Y axis - inclination	00h = Successful; FDh = Failed

Table 29 – Object 300Fh entries description

8.2.3. Object 301Eh Manufacturer status register error mask

Use the error mask to select the error bit in object 1002h that triggers the manufacturer-specific error behaviour. Set this bit to 1 to trigger the error behaviour, or 0 to ignore the error.

Bit	Error
0	Inclination X axis (Longitudinal) Cross Tilt Error
1	Inclination Y axis (Lateral) Cross Tilt Error
2	Inclination X axis (Longitudinal) Out of Range indication
3	Inclination Y axis (Lateral) Out of Range indication
4	Temperature under operational Limit (e.g. T < -40°C, specified in the datasheet.)
5	Temperature over operational Limit (e.g. T > +85°C, specified in the datasheet.)
6	Actual power error (e.g. Supply voltage too low)
7	Power error since last reset (memorized)
8	EEPROM error
9	Flash error
10	Sensor element error
11	Watchdog error
12	Error handler activated error
13 ~ 30	Unused error bits
31	ON/OFF sending of EMCY message '0x8000 Monitoring' at every change of the manufacturer status register bits.

Table 30 – object 1002h Error bit

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

The factory default value is $80001D40_h$ ($10000000000000000011101010000000_b$), which includes following errors:

- Bit 6: Actual power error.
- Bit 8: EEPROM error
- Bit 10: Sensor element error
- Bit 11: Watchdog error
- Bit 12: Error handler activated error
- Bit 31: Send EMCY message

The error behaviour is set via → Object 1029_h error behaviour.

8.2.4. Object $301F_h$ Manufacturer status register mapping

Use object $301F_h$ to map the manufacturer error code (→ 8.1.2 Object 1002_h Manufacturer status register) into the TPDO messages.

Subindex	Manufacturer status register mapping
00h	Highest subindex supported
01h	Manufacturer status register bits 0 - 7
02h	Manufacturer status register bits 8 - 15
03h	Manufacturer status register bits 16 - 23
04h	Manufacturer status register bits 24 - 31

Table 31 – Manufacturer status register mapping object

For example, to get the first 8 bits of the manufacturer error code in the TPDO output, set the TPDO1 mapping parameters to $301F0108_h$ (→ Object $1A00_h$, $1A01_h$ TPDO Mapping parameter).

8.2.5. Object $300E_h$ Output filter

Use object $300E_h$ to set the filter time τ for a **1st order LPF** for all sensing axes (→6.3.3 Digital filters). The cut-off frequency is calculated using this formula: $\mathbf{F_{-3\,dB} = 1/2\pi\tau}$.
τ is the time-constant with a value range of 0ms (off) ~ 10000 ms.

8.2.6. Object $300D_h$ Moving average filter TPDO1 and TPDO2

Use this object to set the average number N for the moving average filter for the TPDOs (→6.3.3 Digital filters).

Value Range	Description
00_h	Moving average filter disabled (factory default)
01_h	Moving average filter disabled.
02_h – $0A_h$	Output is averaged with the last 20 ms – 100 ms samples.

Table 32 – moving average filter TPDO

DIS makes sense!
ISO 9001 BUREAU VERITAS Certification
Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.2.7. Object 3014h Lowpass filter

A 2nd order Bessel filter with a cut off frequency of 10Hz. The frequency cannot be changed. It can be turned ON/OFF. (→6.3.3 Digital filters).

Value Range	Description
00_h	Off
01_h	On

Table 33 – 2nd order Bessel LPF

8.2.8. Object 3032_h Sub Range Limits

Use this object to change the measuring range of the sensor.

Sub index	Name	Value
01_h	Lower Sub Range Limit	0 = sub range disabled -6000d = -60°
02_h	Upper Sub Range Limit	0 = sub range disabled +6000d = +60°

e.g., Lower sub range limit= -6000_d, Upper sub range limit = $+6000_d$ will set the measuring range to -60° to +60°.

⚠ This object only applies to device type 0x90000001 and 0x90000004.

DIS makes sense!

ISO 9001 BUREAU VERITAS Certification

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.3. Standardized device profile (6000h – 9FFFh) (CiA410)

Index	Subindex	Type	Access	Object name and description	Factory default	Detail
6000_h	00_h	U16	r/w	**Resolution** 10_d=0.01°, 100_d=0.1°, 1000_d=1.0°	10_d	8.3.1
6010_h	00_h	S16	r	**Inclination X-axis (longitudinal)** Output X-axis. Inclination [°] with the resolution in object 6000_h	No	
6011_h	00_h	U8	rw	**Operating parameter for Inclination X-axis (longitudinal)** bit0 = 1: inverted; 0: normal bit1 = 1: pre-set value included; 0: pre-set value excluded.	02_h	8.3.2
6012_h	00_h	S16	rw	**Pre-set Inclination X-axis**	0000_h	8.3.3
6013_h	00_h	S16	rw	**Offset Inclination X-axis**	0000_h	8.3.4
6020_h	00_h	S16	r	**Inclination Y-axis (lateral)** Output Y axis. Inclination [°] with the resolution in object 6000_h	No	
6021_h	00_h	U8	rw	**Operating parameter for Inclination Y-axis (lateral)** bit0 inversion = 1: inverted; 0: normal bit1 scaling = 1: enable; 0: disable	02_h	8.3.2
6022_h	00_h	S16	rw	**Pre-set Inclination Y-axis**	0000_h	8.3.3
6023_h	00_h	S16	rw	**Offset Inclination Y-axis**	0000_h	8.3.4
6401_h				**Sensor Outputs**		8.3.5
	00_h	U8	r	Highest subindex supported	0Fh	
	01_h	S16	r	X acceleration scale ±1500 / ±2000 [1 mg]		
	02_h	S16	r	Y acceleration scale ±1500 / ±2000 [1 mg]		
	03_h	S16	r	Z acceleration scale ±1500 / ±2000 [1 mg]		
	04_h	S16	r	X inclination [0.01°]		
	05_h	S16	r	Y inclination [0.01°]		
	06_h - 09_h	S16	r	Reserved		
	$0A_h$	S16	r	Temperature [0.1 °C]	Realtime e.g. 251h	
	$0B_h$ - $0D_h$	S16	r	Reserved		
	$0E_h$	U16	r	X inclination [0.01°] scale 0°-360°		
	$0F_h$	U16	r	Reserved		
6511_h	00_h	S16	r	**Device Temperature [1°C]**	No	

Table 34 - Standardized device profile

⚠ *To permanently save application-specific parameters permanent in the EEPROM of the device, use only CAN Object 1010h, otherwise the changes will be lost after a power cycle.*

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.3.1. Object 6000h Resolution

The resolution of the inclinometer can be configured with object 6000_h. The QG65/76N2 inclinometer has a default resolution of 0.01°.

8.3.2. Object 6011h, 6021h Operating parameter

Use the operating parameter to set the +/- direction of measurement, and whether the pre-set value should be calculated.

Index	Subindex	Value			
6011_h **6021_h**	00_h	Bit 0	Inversion	0 1	Disable (DIS default) Enable (inverted)
		Bit 1	Pre-set	0 1	Disable Enable

Table 35 - Operating parameter

If Pre-set is enabled, the actual output will be calculated with the pre-set value in Object 6012_h and 6022_h. (see below).

If Pre-set is disabled, the actual output is the unscaled physically measured inclination value.

8.3.3. Object 6012h, 6022h Pre-set inclination value

Use these objects to store pre-set inclination values for the X and Y axis at a certain position, with the resolution given in object 6000_h. The outputs will be then adjusted to the stored pre-set value. The offset is stored in Object 6013_h, 6023_h Offset inclination value. They will be restored 00_h after you Load the default setting.

Index	Value	Example
6012_h	Pre-set inclination X-axis	0000_d- 0°
6022_h	Pre-set inclination Y axis	0100_d - 1°

Table 36 – Object 6012_h/6022_h Pre-set inclination value

2-axis ±30°/±90° sensors can only be pre-set in a horizontal position within an offset limit of ±5°.

8.3.4. Object 6013h, 6023h Offset inclination value

These objects store the offset inclination values for the X and Y axis after the pre-set is done. They will be restored to the offset value by the zero calibration at factory after you Load the default setting.

Index	Value	Example
6013_h	Pre-set inclination X-axis	-9007_d (1-axis Sensor pre-set at -90.07° position)
6023_h	Pre-set inclination Y axis	$+0200_d$ (2-axis Sensor pre-set at Y=+2.00° position)

Table 37 – Object 6013_h/6023_h Offset inclination value

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.3.5. Object 6401h Sensor outputs

Various types of outputs are stored in object 6401_h. These values can be mapped into TPDOs (→8.1.12 Object $1A00_h$, $1A01_h$ TPDO Mapping parameter).

Subindex		Output Types	Description
00_h	U8	Highest subindex supported	$0F_h$
01_h	S16	X acceleration	[resolution 1 mg] Scale (high accuracy series): ±1500 Scale (std. accuracy series): ±2000
02_h	S16	Y acceleration	
03_h	S16	Z acceleration	
04_h	S16	X inclination	[resolution 0.01°] Scale ±180° (Same as 6010.00)
05_h	S16	Y inclination	[resolution 0.01°] Scale ±180° (Same as 6020.00) For 2-axis sensor only
06_h – 09_h	S16	Reserved	Default by read: 0000_h
$0A_h$	S16	Temperature [0.1 °C]	[resolution 0.1 °C] Temperature measured by internal MEMS sensing element.
$0B_h$ – $0D_h$	S16	Reserved	Default by read: 0000_h
$0E_h$	U16	X inclination	[resolution 0.01°] X inclination output on a scale of 0° to 360° (0 - 36000).
$0F_h$	U16	Reserved	

Table 38 – Sensor outputs

8.4. Data type

Data types used in the application layers are explained in the following table.

Data type	Definitions
U8	Unsigned 8-bit number ($0 – 255_d$)
U16	Unsigned 16-bit number ($0 – 65535_d$)
U32	Unsigned 32-bit number ($0 – 4294967295_d$)
S8/Integer 8	Signed integer 8-bit number ($-128_d – +127_d$)
S16/Integer 16	Signed integer 16-bit number ($-32768_d – +32767_d$)
S32/Integer 32	Signed integer 16-bit number ($-2147483648_d – +2147483647_d$)
VSTR	Visible String

Table 39 - Data type

ISO 9001 BUREAU VERITAS Certification

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

9. Configuration tool

The QG65/76N2 CANopen Inclinometer can be easily configured using DIS configurator set CAN developed by DIS Sensors. The tool also displays live data from the sensor. The configuration tool consists of a configuration kit and PC software. The configuration kit can be ordered separately, and the software can be downloaded from our website.

The minimum display resolution for the PC application is 1360x768p.

9.1. Configuration kit

DIS configurator set CAN comprises:

- Item 1: USB-CAN dongle. (Peak USB-CAN IPEH Interface adaptor)
- Item 2: CAN power box with power adapter connection.
- Item 3: 0.3 m CAN cable for connecting the sensor.
- Item 4: Power adaptor. (Figure 18)

(the power adaptor is an EU adaptor, user in regions might need a convertor which is not included.)



Figure 18 - Connection of DIS configurator set CAN

The USB-CAN dongle (item 1) provides the communication between USB and CAN interface. Note that DIS has modified the Peak USB-CAN IPEH Interface adaptor to forward a 5 V power supply to the CAN power box (item 2). If a standard (unmodified) Peak USB-CAN adaptor is used, the included power adaptor (item 4) must be used.

The CAN power box (item 2) provides the voltage supply to the sensor devices. When only 1 sensor is connected, it can be powered via the USB-CAN dongle (item 1) by the 5 V USB power. If more than 1 sensor is connected, then the power adapter (item 4) must be used instead. This power adapter can support up to 32 dynamic Inclinometers from DIS Sensors.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000



Figure 19 - Power adapter for the CAN power box

The CAN power box is also equipped with a switch to control the internal CANbus termination resistor within the CAN power box. The label clearly shows “on” and “off”.



Figure 20 - CAN power box

Two LEDs on the CAN power box indicate the power status. The green LED (connection indication) will be lit when it is connected correctly to the PC. The red LED (current overload indication) will be lit when the USB port is overloaded (max. 250 mA) to protect your PC or laptop. If you use the power adapter to supply the CAN power box, then the internal power supply and the current overload protection are disabled.

⚠ *If the CAN configurator is not used ‘stand-alone’ (i.e. only configurator + DIS sensor) but is connected to a powered CANbus system, then this CANbus system must be powered with Vcc > 20 V dc. Otherwise, the USB / DIS configurator will have to supply power to the entire CAN system chain, which can potentially harm the PC and connected items.*

⚠ *DIS configurator set CAN will supply 18Vdc on Vcc and Gnd to the connected CAN systems/CAN sensors. Connecting sensors from other brands could potentially harm the equipment.*

The configuration tool can be loaned on request free of charge for pilot testing.

DIS configurator set CAN may be used in an ambient temperature range of +10 °C to +50 °C without power adapter, or 0 °C to +40 °C with power adaptor.

9.2. PC software

The PC software and a detailed manual can be download from the DIS website free of charge. The software provides a portal for both sensor configuration and live data monitoring. The description in this chapter is based on the first

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

released version. **The changes will only be updated in the separate manual for the configurator, which you can also download from the DIS website.**

Key features:

- **Sensor detection.** Click 

, the software will scan the CAN bus and find the connected sensors. Basic information such as product name, serial number, etc. will be shown as in Figure 20.

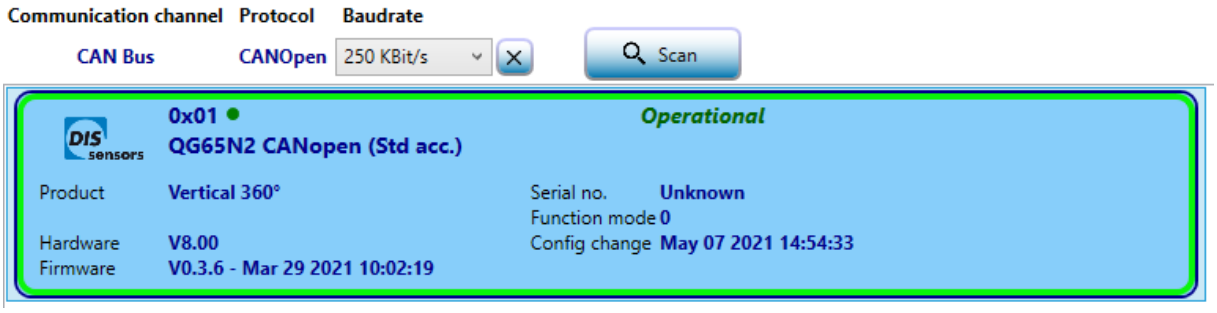

Figure 21 - Sensor detection

- Click on the displayed sensor to show a detailed configuration panel.

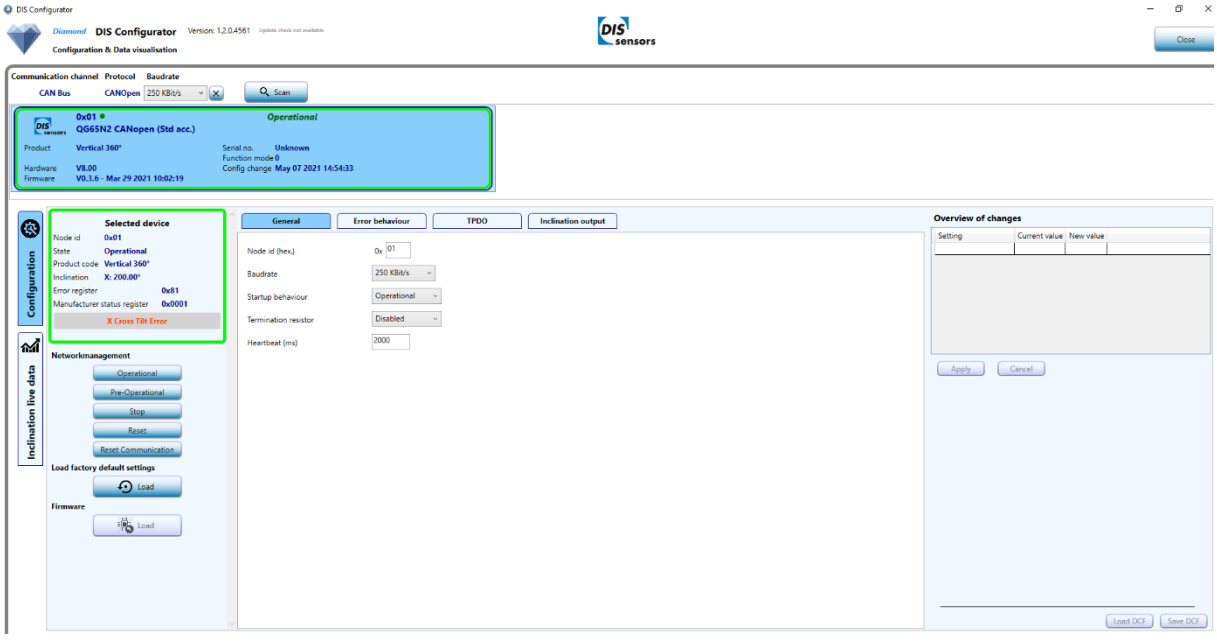

Figure 22 - Configuration panel

- The configurator keeps track of all changes you have made. Click the Apply button to save the changes to the sensor device. This can take a little time, after which the new settings will take effect.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

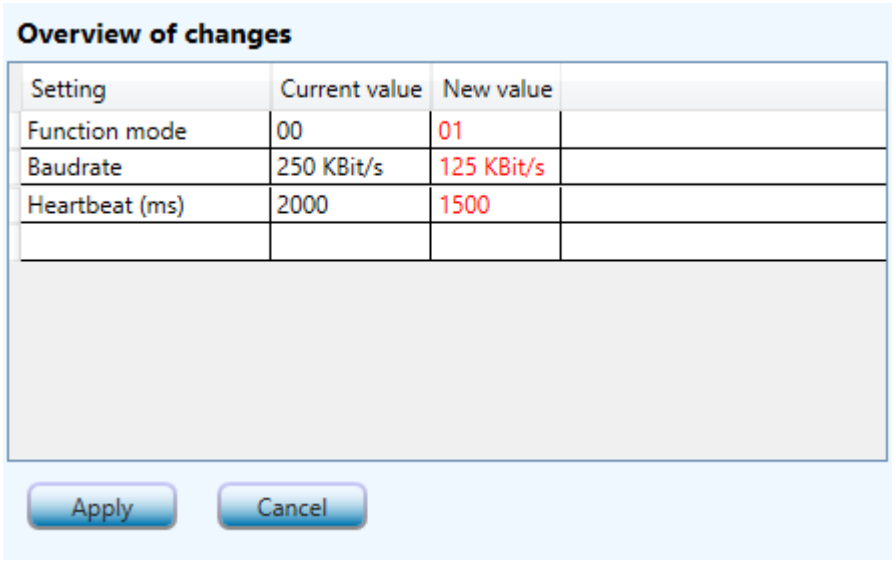

Figure 23 - Overview of changes



Figure 24 - Saving the changes.

- General configuration, Error behaviour, TPDO parameters and parameters for inclination output can easily be configured here.



Figure 25 - General configuration

ISO 9001 BUREAU VERITAS Certification

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

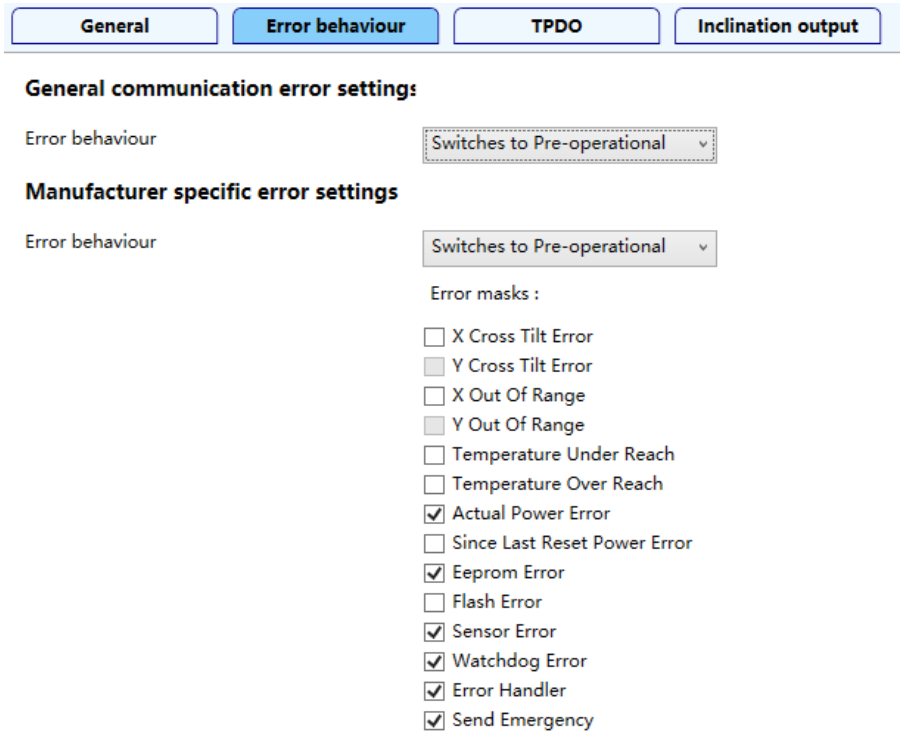

Figure 26 - Error behaviour

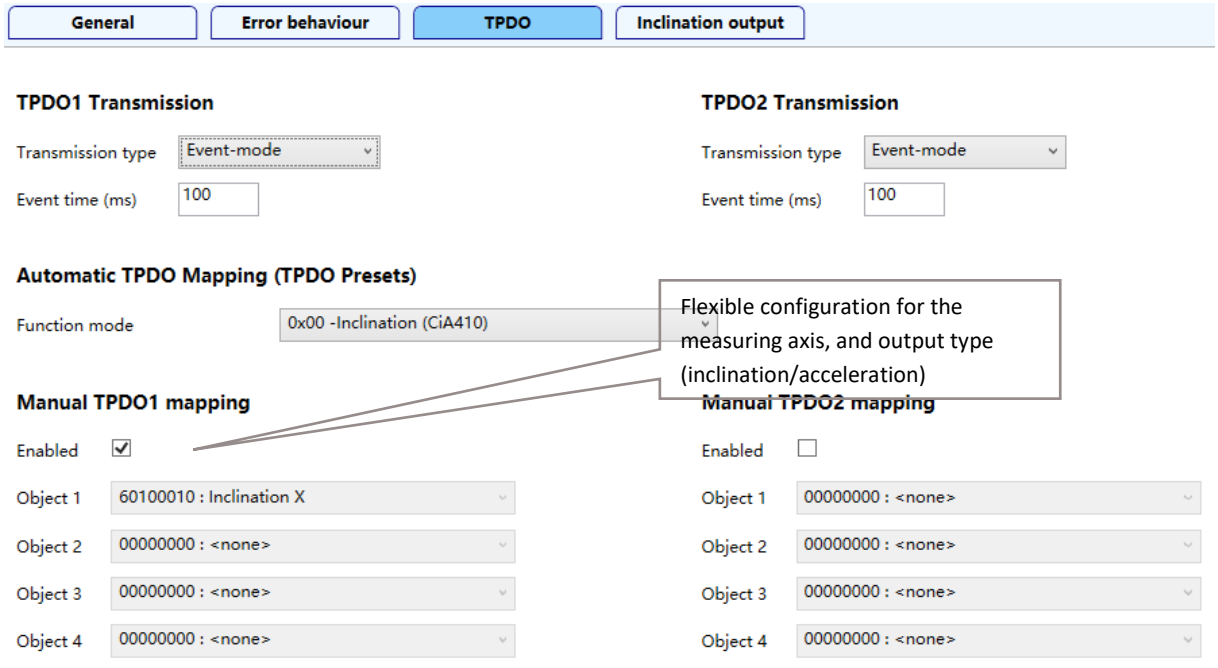

Figure 27 - TPDO mapping parameters in configuration panel

The PC software supports all TPDO mapping options, including 0-360° output. This output can therefore be used by a pilot customer, as 0-360° values are transferred in the TPDO message. Device profile inclinations ±30°, ±90° and ±180° are visible only in the live data tab.

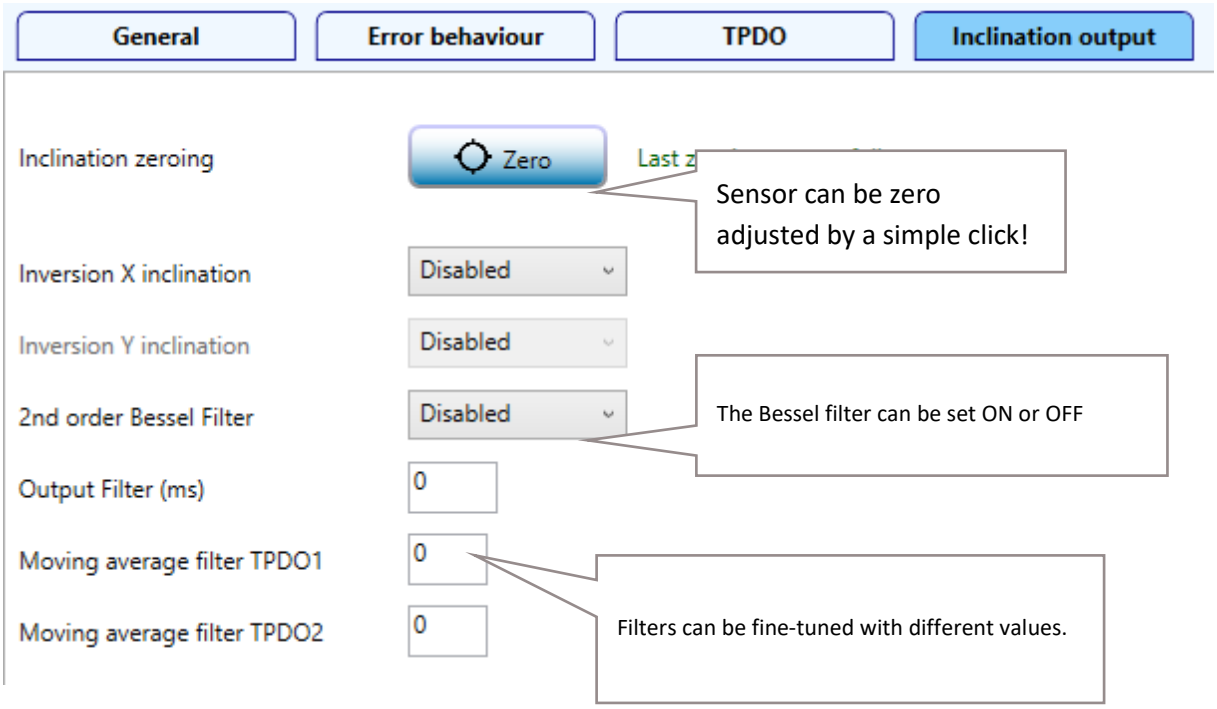

Figure 28 - Application profiles in configuration panel

- The “Live data” tab shows the real-time sensor outputs. The chart can also be c as an image.

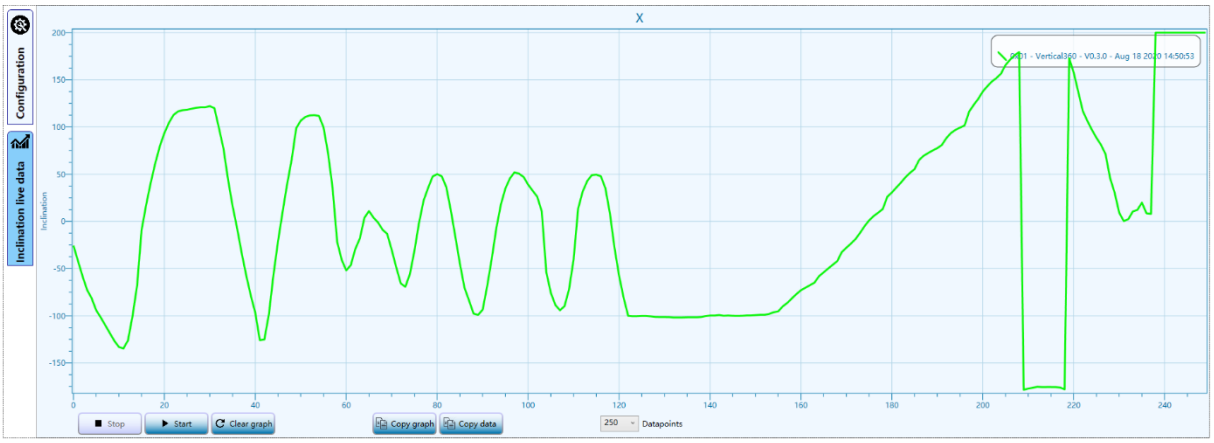

Figure 29 - Live data

- Future versions of this software will support upgrading of the firmware.

DIS makes sense!
ISO 9001 BUREAU VERITAS Certification
Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

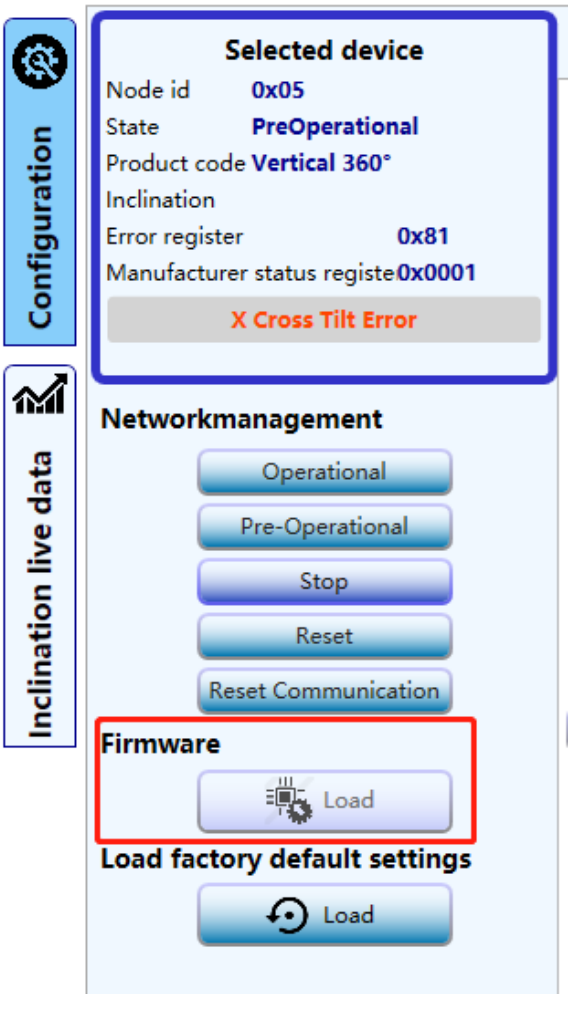

Figure 30 - Firmware update

DIS makes sense!
ISO 9001 BUREAU VERITAS Certification
Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

10. Abbreviations and definitions

CAN	Controller area network
CAN-ID	CAN identifier
COB	Communication object
COB-ID	COB identifier
CRC	Cyclic redundancy check
CiA	CAN in Automation
DOF	Degrees of freedom
EDS	Electronic data sheet
EMCY	Emergency
LPF	Low-Pass Filter
MEMS	Microelectromechanical system
NMT	Network Management
PDO	Process Data Object
SDO	Service Data Object
SYNC	Synchronization
TPDO	Transmit PDO

11. Normative references

CiA301	CANopen application layer and communication profile. Version: 4.2.0
CiA303-1	Cabling and connector pin assignment. Part 1: Cabling and connector pin assignment. Version: 1.9.0
CiA305-DSP	Layer setting services (LSS) and protocols, draft standard proposal
CiA306	Electronic data sheet specification for CANopen V1.3.0
CiA410	Device profile for inclinometer. Version: 1.3.0
IEC 61076-2-101	Connectors for electronic equipment - Part 2-101: Circular connectors – Detail specification for circular connectors M8 with screw- or snap-locking, M12 with screw locking for low voltage applications

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000